



La MARCHÉ®

MANUAL MAINTENANCE BYPASS SWITCH

OPTION 145, 146 OR 147

CAUTION:

WHEN SWITCHING THE MANUAL MAINTENANCE BYPASS SWITCH FROM BYPASS TO AUTOMATIC, MAKE SURE THE INVERTER AND STATIC SWITCH ARE OPERATING.

THE STATIC SWITCH LAMP TEST MUST BE COMPLETED BEFORE SWITCHING TO AUTOMATIC. BYPASS PHASE MUST BE WIRED TO INVERTER SYNC INPUT.

SEE NOTE ON INVERTER SCHEMATIC.

ECN/DATE

106 BRADROCK DRIVE
DES PLAINES, IL. 60018-1967
(847) 299-1188
FAX: (847) 299-3061

ISSUE DATE: 10264 – 7/96

INSTRUCTION DRAWING NUMBER:

P25-**LOPT145/146/147-1**